


Weighting the Shade Cap


Correctly Positioning the Weight

The stainless steel weight P/N: 2300/2360-510 should always be positioned so that the countersunk holes on the weight's front side (below) are directed away from the Shade Cap when securing the weight to the End Cap.

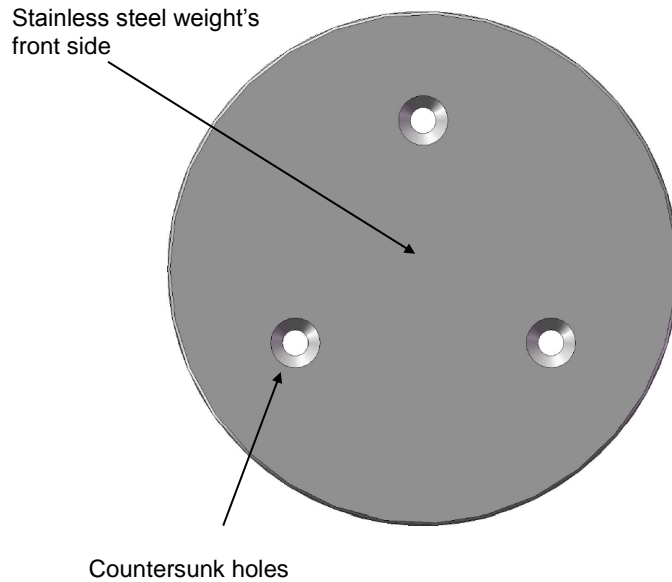

- Secure the stainless steel weight to End Cap using the screws provided.

Note: Make sure not to cross thread the screws when securing the weight to the Shade Cap's End Cap.

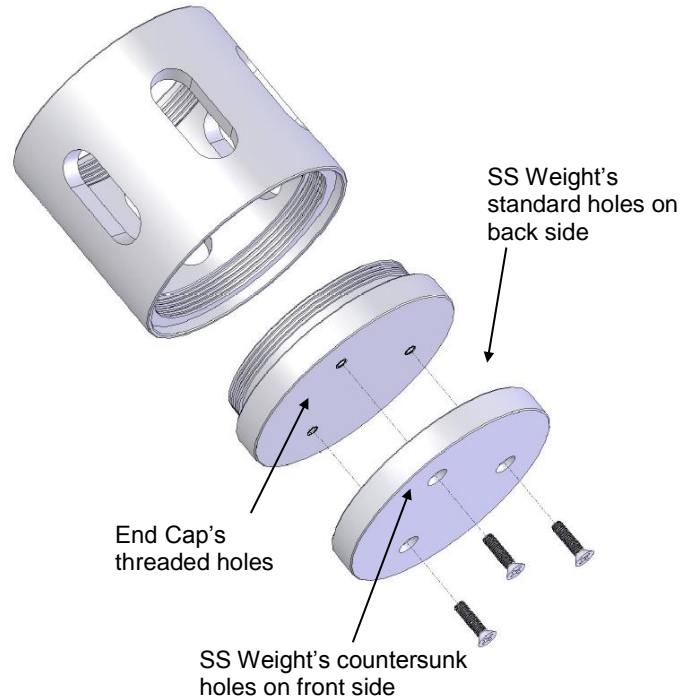

Installation

- Align the stainless steel weight's standard holes with the End Cap's threaded holes making sure that the countersunk holes are facing away from the End Cap.

- The stainless steel weight is fully secured when the screw heads sit flush with the stainless steel weight's front side (face).