



**Wiring Guide**

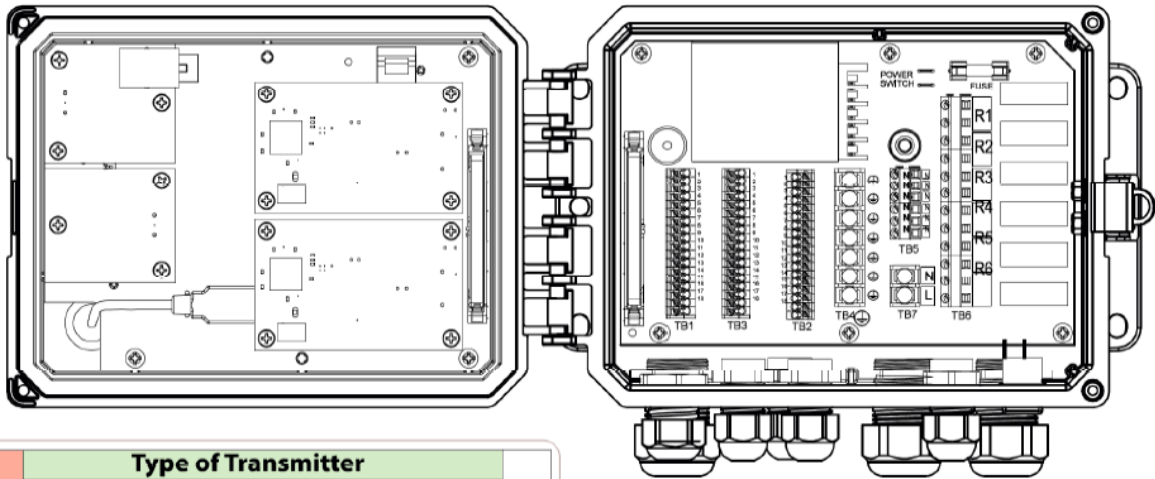

TB Pin#	Type of Transmitter				AI#
	2 Wire Loop	2 Wire Powered	3 Wire	4 Wire	
1	+24V		+24V	+24V	1
2				24V(-)	
3		XMTR-		XMTR-	
4	XMTR-	XMTR+	XMTR+	XMTR+	
5			COM(-)		
6	SHIELD	SHIELD	SHIELD	SHIELD	
7	+24V		+24V	+24V	2
8				24V(-)	
9		XMTR-		XMTR-	
10	XMTR-	XMTR+	XMTR+	XMTR+	
11			COM(-)		
12	SHIELD	SHIELD	SHIELD	SHIELD	

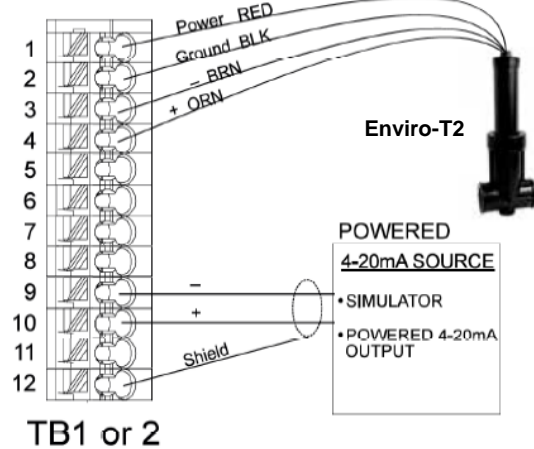

**Programming the W600 AI (Analog Output) card:**

**Selecting and programming the AI card**

1. From the Home screen, press Inputs
2. Select the correct Analog Input
3. Press the
4. Press the DOWN arrow until you get to Units.
5. Press UNITS
6. Using the letter and arrow keys, change Units to µg/L
7. Press the to enter the Units
8. Press the UP/DOWN arrows until you get to the 4 mA and 20 mA values.
9. Press the 4 mA Value. Value should be 0.
10. Press the 20 mA value. Value should be 100.

**Recommended Walchem P/N WCT600PANNN-NN**